

Jet Trax Users Guide



**Jet Trax of California
PO Box 2664
Santa Clarita, CA 91386-2664
1-800-953-8729**

Jet Trax Transport System Users Guide

To Load your Personal Watercraft

- 1) Stop in the boat launch staging area to prepare your Jet Trax System.
- 2) At this time lower the truck tail gate
- 3) Check operation of the Jet Trax System by turning the Winch Remote Control Switch to the OUT (up) position and then to the IN (down) position momentarily.
- 4) Back the vehicle down the boat ramp until the rear wheels of the vehicle touch the water's edge.
- 5) Go to the rear of the Jet Trax System and remove the transport safety pin.
- 6) Push and hold the Winch Remote Control Switch in the OUT position. At the same time, give the Jet Trax bunk a slight pull to start it in motion. This will allow the Jet Trax bunk to become fully extended. The end of the bunk should be approximately 4" to 6" above the water when fully extended.
- 7) Take the tow hook, at the end of the winch strap, and hook it securely to the tow eyelet, on the bow of your personal watercraft. An orange ring is provided to loop into the bow if needed.

WARNING: Make sure the winch strap is STRAIGHT and NOT TWISTED, to insure proper operation.

- 8) Push the Remote Control Switch to the IN position. This will start the Jet Trax system pulling your personal watercraft onto the Jet Trax bunk. Hold the Remote Control Switch in the IN position until your personal watercraft and the Jet Trax bunk is pulled completely into the vehicle.
- 9) Insert the transport safety pin after the system is pulled onto the vehicle.
- 10) Attach the transport safety chain to the tow eyelet on the bow of your personal watercraft.
- 11) Secure the rear of the watercraft using a ratcheted tie down strap from the back of the watercraft unit to the bumper.

To Unload your Personal Watercraft

- 1) Stop in the boat launch staging area to prepare your Jet Trax system.
- 2) At this time lower the truck tail gate
- 3) Check operation of the Jet Trax system by turning the Winch Remote Control Switch to the OUT (up) position and then to the IN (down) position momentarily.
- 4) Back the vehicle down the boat ramp until the rear wheels of the vehicle touch the water's edge.
- 5) Go to the rear of the Jet Trax system and remove the transport safety pin.

WARNING: Make sure the Winch strap is securely attached to the personal watercraft at all times during loading and unloading. If the Winch strap is not securely attached, damage to the personal watercraft and/or personal injury may

- 6) Push and hold the Winch Remote Control Switch in the OUT position while pulling on your personal watercraft, to start the outward motion. Hold the Remote Control Switch in the OUT position until the personal watercraft is floating freely in the water.

- 7) Unhook the personal watercraft from the winch.
- 8) Hook the winch strap to the Jet Trax bunk. Push the Remote Control switch to the IN position, to pull the Jet Trax bunk back into the vehicle and into the transport position
- 9) Reinsert the transport safety pin, after the Jet Trax bunk has fully retracted into the vehicle.

Following these directions, steps and warnings will help insure safety and enjoyment while using your personal watercraft and the Jet Trax Transport System.

If you have any questions, please give us a call at 1-800-953-8729.

Basic Replacement Parts List

- Mounting plate
- Frame base
- Winch Strap and Hook
- Transport Safety Pin
- Slotted Tube
- Bunk Assembly Wood
- Strap Guide Rollers
- Rear Rollers
- Main Guide Roller
- Inside Track Roller
- Winch

Conversion kits for Snowmobile and ATV's are available for your unit. Please call for more information

WE HOPE YOU ENJOY USING YOUR JET TRAX SYSTEM!!!